


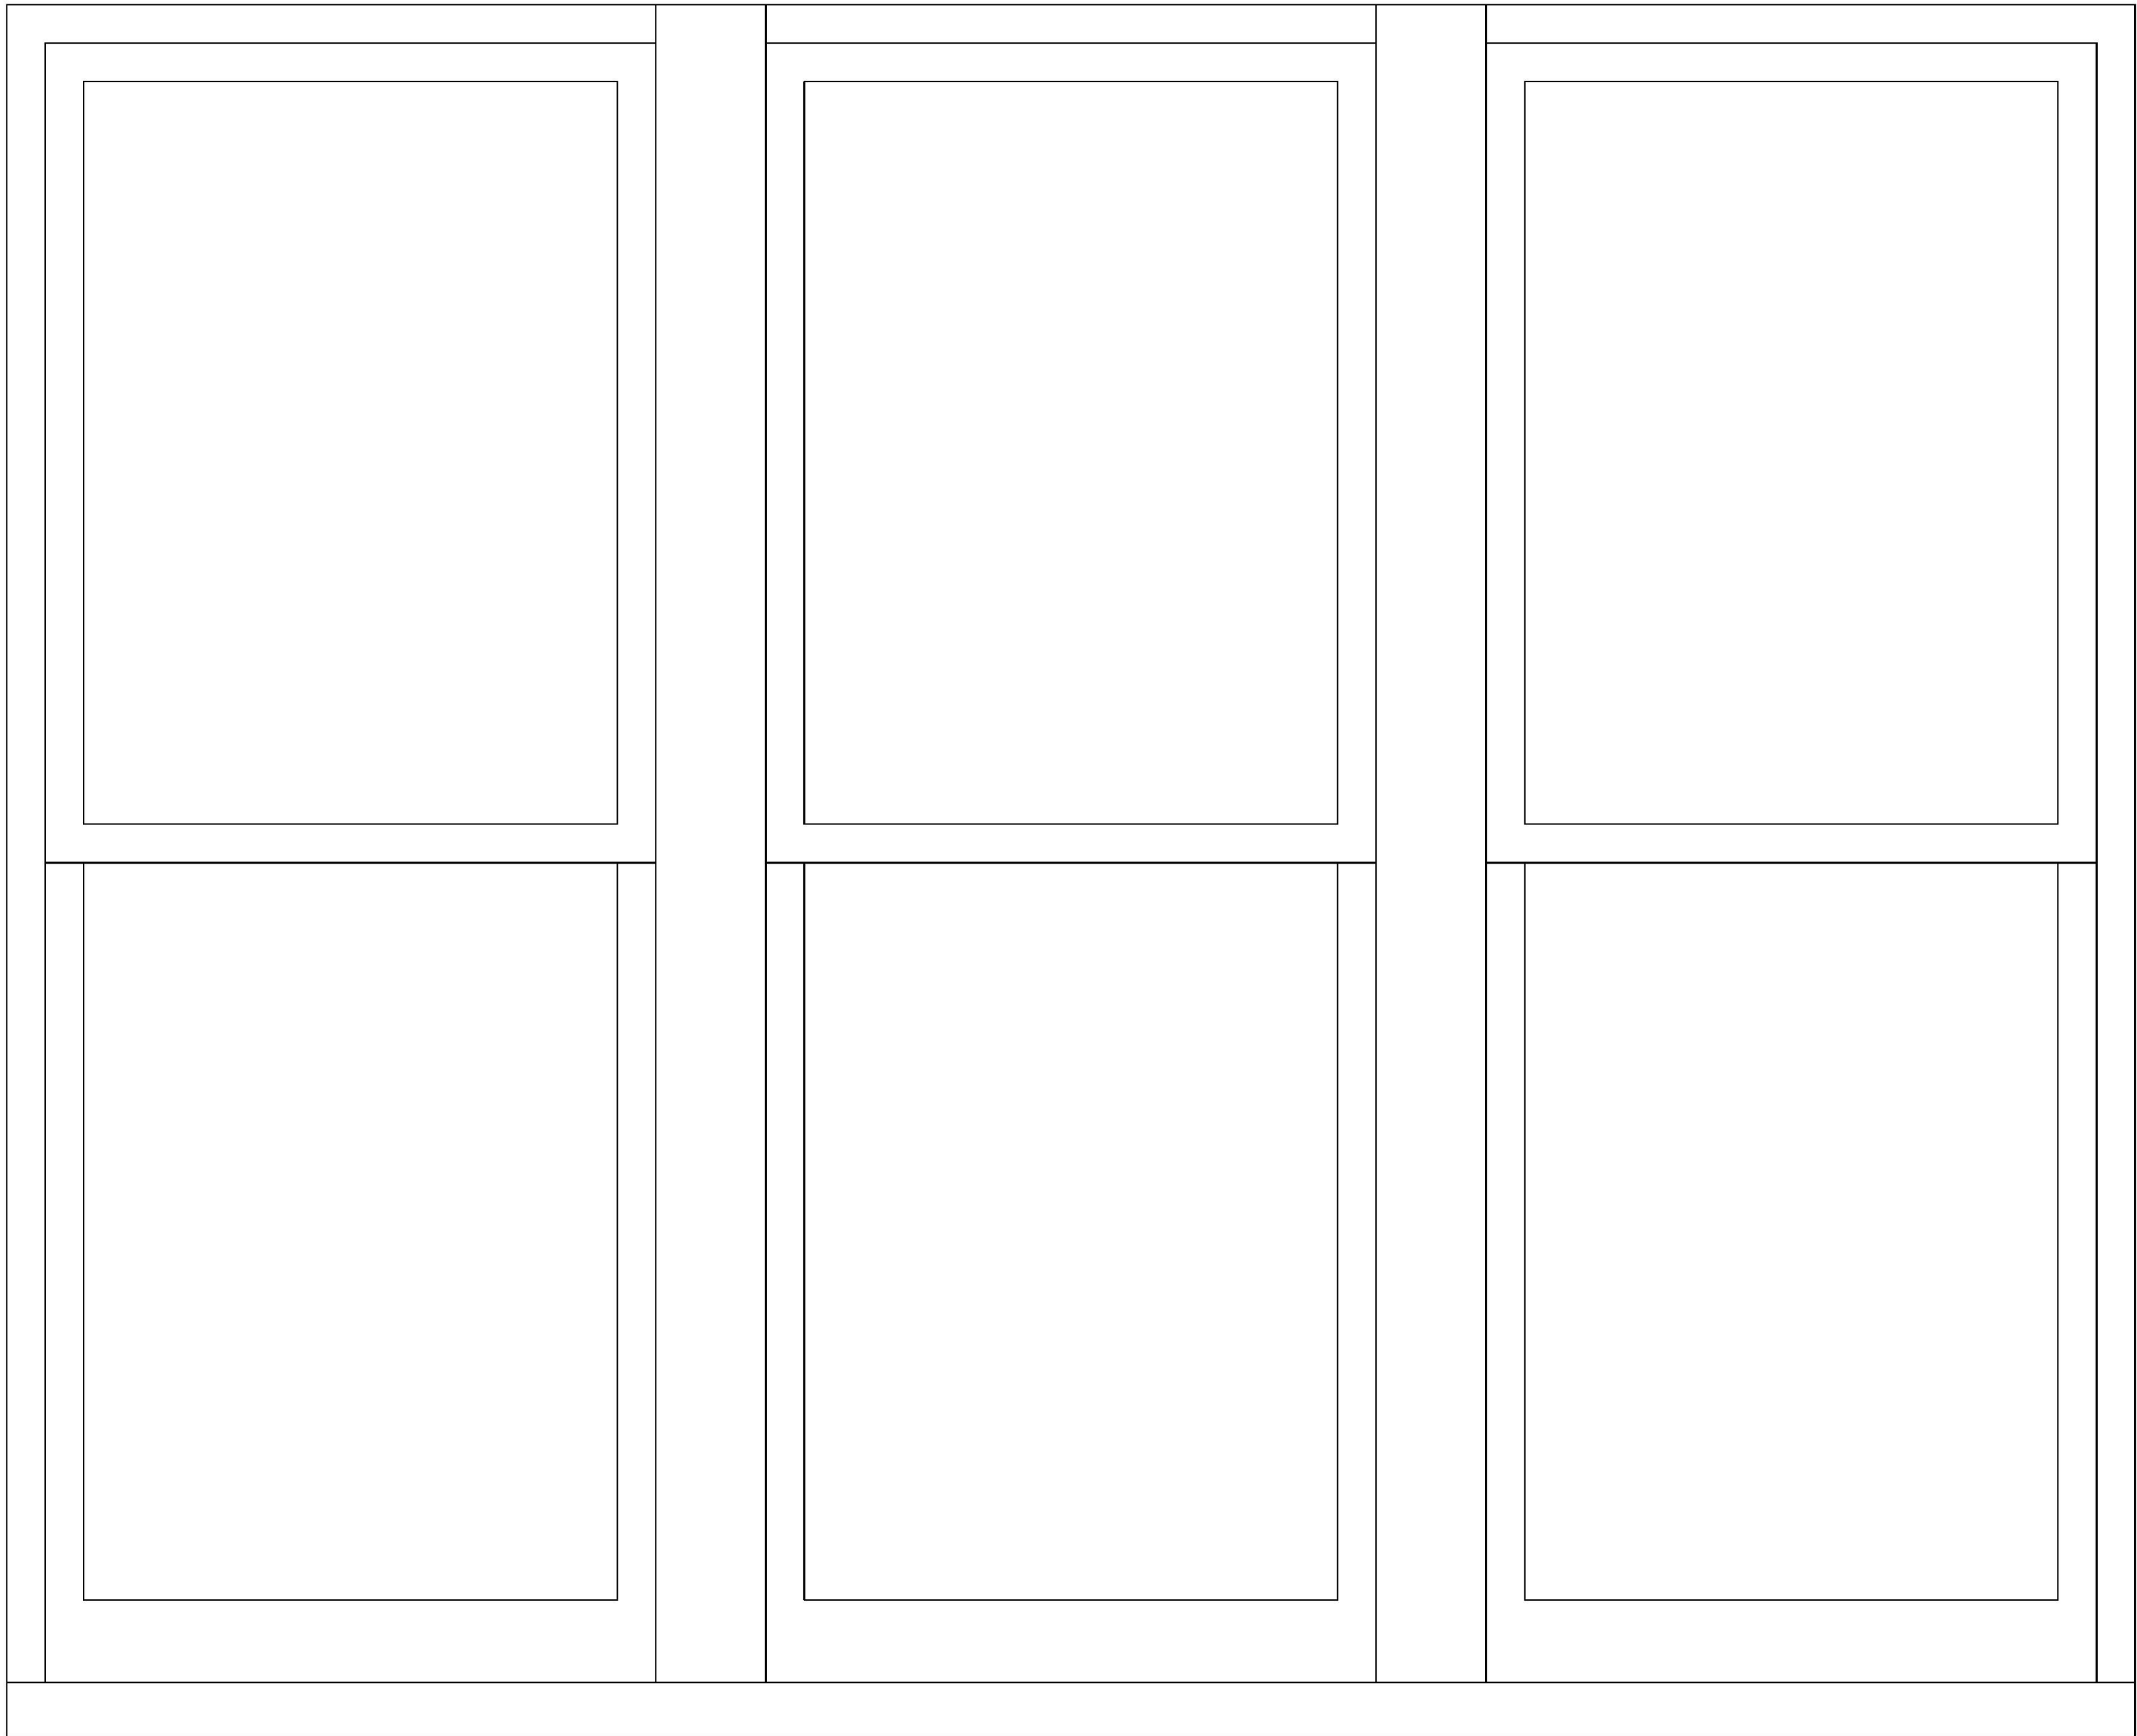

General Repair Specification
Window WF07, WF08, WF09
• Remove glazing putty & obscure single glazing and dispose.
• Remove old sash cords and replace.
• Install new 4mm single glazing with new putty.
• Install draught insulating to meeting rails, sash jamb & bottom and top rails.
• Strip back decorations, fill sashes, cills & frames then redecorate, colour strong white.
• All minor damaged timber surfaces to be resin repaired.

Urban Surveying & Design
• Chartered Building Surveyors • Chartered Architects •



The Old Bakery, 22 Church Street,
St. Peters, Broadstairs, Kent, CT10 2TT
Tel: 01843 867507
Email: info@urban-surveying.com
Website: www.urban-surveying.com

Client Details:
MPL Group Ltd.

Project Details:
11 Church Street, Folkestone,
Kent, CT20 1SE.

Drawing Title:
WF07, WF08, WF09
Window Details

Planning Conditions

Scale: 1:5 @ A1	Date: Oct' 2019	Drawn By: AE
--------------------	--------------------	-----------------

Drawing No.: 19.1540.PC129	Revision: /
-------------------------------	----------------